



## NMV-168/ Digital MP4 Player



# User Manual

NMV-168 is a new generation media player, supporting MP1, MP2, MP3, WMA, or WAV files. Its perfect tone in high reliability with refined exterior design brings you an ultra performance.

### Overview

- Refined exterior design  
Unique design fits for hand.
  - Multi file format support!  
This player recognize MP1, MP2, MP3, WMA and video in AMV format.
  - Firmware upgrade available  
You can download upgrade software from website enhancing player's function.
  - FM stereo radio  
Powerful automatic or manual tuning capability, save up to 40 channels (20 channels in each system).
  - e-Documents  
You can download text files into the player and read it any time as you like.
  - Driver free USB memory  
Manage your files in USB memory without specified software, no need drivers in WIN2000 or furthers.
  - 'Secret Space'  
You can separate part of the memory encrypting and hiding in using programs provided, where data
-

---

cannot be seen or written by others.

- Recorder / Repeat

Voice can be recorded and saved in WAV format. Phase/Contrast repeat available.

- Equalizer

Normal, Rock, Pop, Classic, Soft, Jazz, Bass

- Backlight colors

This player provides 7 backlight colors.

- Play modes

Normal, Single Repeat, Play Catalog, Repeat Catalog, Repeat All, Shuffle, Lyric.

- Timing turning off

The player provides Sleep and battery saving mode, more convenience for you!

- Complete dynamical menu

Visualized dynamical menus with text instructions make you easy control.

## Declarations

Welcome to choose our produce, please read this manual carefully.

Functions and performance may change without prior notice.

If any difference between produce and this manual, please visit our website

# Contents

|                                  |   |
|----------------------------------|---|
| • Overview.....                  | 1 |
| • Declarations.....              | 1 |
| • Know your player.....          | 4 |
| Exterior and Keys.....           | 4 |
| Display.....                     | 4 |
| Battery Level.....               | 4 |
| Basic Functions.....             | 5 |
| Access to Menus.....             | 5 |
| Scrolling.....                   | 5 |
| List of Menus .....              | 5 |
| Volume Adjust .....              | 7 |
| Switch On/Off .....              | 7 |
| Play & Stop .....                | 7 |
| Start/Stop Recording .....       | 7 |
| Keys Processing .....            | 7 |
| Keys function definition .....   | 7 |
| Keys processing definition ..... | 8 |


---

---

|                                  |    |
|----------------------------------|----|
| Play music.....                  | 8  |
| Simple Actions .....             | 8  |
| Equalizer mode .....             | 8  |
| Synchronous Lyric Display.....   | 9  |
| Voice Recorder.....              | 9  |
| Recording on 'Record Mode' ..... | 9  |
| Select Record Type.....          | 10 |
| Play recorded files .....        | 11 |
| Using FM radio .....             | 11 |
| Using Photo .....                | 11 |
| Settings.....                    | 12 |
| Entry settings .....             | 12 |
| Options introduction .....       | 12 |
| List of menu .....               | 13 |
| Play Videos .....                | 15 |
| Reading Documents.....           | 15 |
| • Browsing Pictures.....         | 16 |
| • Using USB Disk.....            | 16 |
| • Other Settings .....           | 16 |
| Choose other fold.....           | 16 |
| Delete Files .....               | 16 |
| Play Mode .....                  | 17 |
| Tempo rate.....                  | 18 |
| Repeat Mode.....                 | 18 |
| A-B Repeat.....                  | 18 |
| Karaoke .....                    | 18 |
| Contrast Function.....           | 19 |
| Repeat Times .....               | 19 |
| Repeat Interval.....             | 19 |
| New Function Recommends .....    | 19 |
| Secret Space Function.....       | 19 |
| Troubleshooting.....             | 21 |
| Technical Specifications .....   | 21 |

---


## Know your player

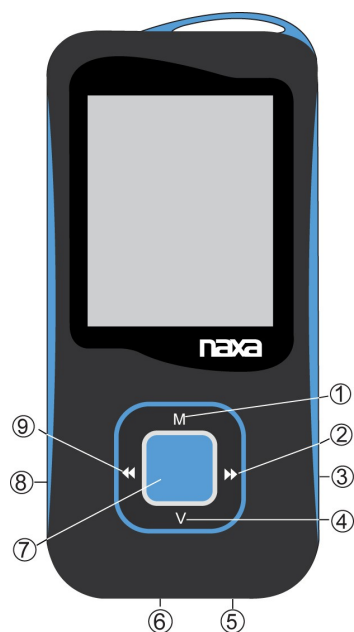

## ● Exterior and Key

- |                |             |
|----------------|-------------|
| 1 Menu         | ⑥ USB Port  |
| 2 Next         | ⑦ PLAY      |
| 3 Power ON/OFF | ⑧ Card slot |
| 4 VOL          | @ Last      |

## ● Display

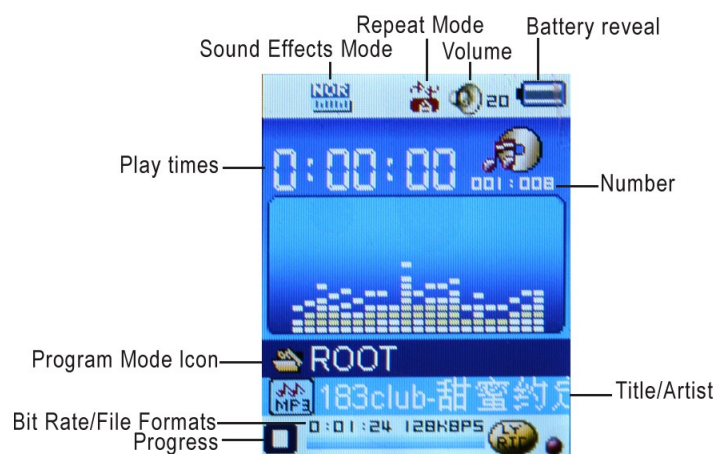

---

## Battery Level

The player shows capacity in 9 levels

■ Battery is full on 3.7V. As time goes on, capacity indication will reduce.

□ Indicator shows blank when battery almost ran out. You should charge your battery at that time.



Please switch on the player before charge. This player cannot be charged in case of power off/



Please switch off power when not using the player.

## Basic Functions

- **Access to Menus**

Press **Mode** to access menus.

- **Scrolling**

- Scroll music, menus

- Fast Forward / Reverse when playing music.

- **List of Menus**

To access different menu functions from main menu.

Main menu: (Hold **Mode** to access)



Video play:



---

Music Mode:



Recorder Mode:



Play Mode:



FM Mode:



Browsing pictures:




Settings:


---



E-Documents:

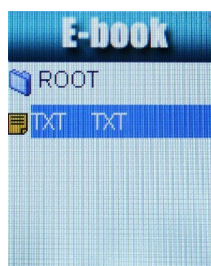

USB Mode (Connect to PC):

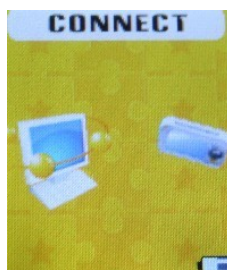

- **Volume Adjust**  
Press **VOL+** to increase volume, press **VOL-** to decrease.
- **Switch on/off**  
Press and hold **Play** to switch on when the player is off.  
Press and hold **Play** to switch off when the player is on.
- **Play & Pause; exit from submenu**  
On music mode, Press **Play** to play music.  
When playing music, press **Play** to pause; press and hold to stop playing.
- **Start / Stop recording**  
On recording mode, press **Play** to stop.

## Keys Processing

- **Keys Functions Definition**

- 1 . **Play**: Play, Pause, Stop
- 2 . **MODE**: Entry main menu or exit from current menu.
- 3 . **REC**: Entry voice record interface.
- 4 . **A-B**: Access Repeat Mode interface..
- 5 . **VOL+**: Volume increase
- 6 . **VOL-**: Volume decrease.
- 7 . **Next**: Next, FF, Volume increase
- 8 . **Last**: Previous, Rev, Volume decrease
- 9 . **USB**: USB outlet
- 10 . **Earphone**: Standard earphone outlet
- 11 . **ON/OFF**: Power switch

- **Key Processing Definition**

Keys processing includes 4 actions: Press, Press and Hold, Push, Hold. **If not mentioned, all actions are Press.**

**Press**: Press a key and valid immediately;

**Press and Hold**: Press a key and hold it at least 1.2s this action valid only once.

**Push**: Push a key, and valid when released.

**Hold**: events occur in such frequency then the key is holding such as Fast Forward and Reverse.

## Play music

- **Simple actions**

1. Put earphone plug into earphone outlet;
2. Press and hold **Play** to switch the player on, then entry Music Mode and press **Play** to play music.
3. Select a music: **Last**: Previous music;  
**Next**: Next music.
- 4 . For AMV files, video play will apply.


- **Equalizer Mode**

1. When playing music



2. Press **Mode** to entry play submenu;
3. Push **Next** choosing Equalizer Mode;
4. Press **Mode** to entry 'Equalizer Mode' submenu.

Select an equalizer:

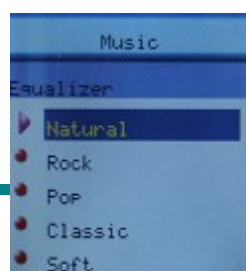



---

5. Detail of each equalizer (EQ):

|           |
|-----------|
| Natural   |
| Rock      |
| Pop       |
| Classical |
| Soft      |
| Jazz      |
| DBB       |

6. Push **Next** to select an EQ and press **Mode** to confirm.

- **Synchronize Lyric Display**

The player supports lyric files with \*.LRC suffix, and displays synchronously.

How to use lyric files?

Please make sure the lyric has the same name to the music

For example:

Music file: Journey.mp3

Lyric file: Journey.lrc


How to know if lyric available?

If lyric matched, a red icon  will be displayed on the left down corner of screen,

1. When matched lyric available :



2. Press and hold **Mode** to entry lyric interface;

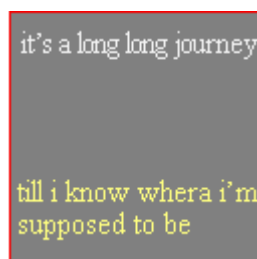

3. Lyric displays

---

- 
4. Press **Mode** return to music mode.

## Voice Recording

Please make sure the battery has enough capacity before making record.  
Each fold can save up to 99 voice recording files.

- **Recording on “Record mode”**

1. .Entry main menu:



2. Push **Next** scroll to Record mode
3. Push **Mode** to select Record mod, screen will display as below:



4. Press **Play** to start recording.



Voice will be recorded in current fold which set through 'Record stop / Main fold'



If displayed “Memory full”, it means no space to save new record files, please delete other files to release memory space.



If “Fold full” shown, it means there are 99 record files in this fold. Please choose another one.



The player only responses to **Play** and **A-B** when record processing


- **Select Record Type**

1. When in the interface of 'Record stop'
2. Press **Mode** to entry record submenu



3. Push next scrolling into 'Record type' submenu then presses **Mode** to select it.
4. Press **Next** to choose appropriate type and press **Mode** to select it
5. Press **Play** to start recording.

## Play recorded files

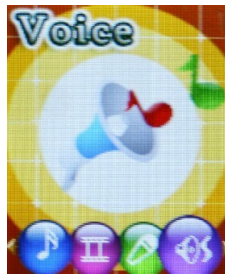

1. Entry main menu
2. Push **Next** to choose 'Play mode'
3. Push **Mode** to entry playing interface
4. Press **Play** again to play the file.
5. Choose voice record files.  
**Last:** Select previous file;  
**Next:** Select the next file;


## Using FM radio

1. Entry main menu;
2. Push **Next** scrolling "FM Mode"
3. Push **Mode** to entry



4. Auto tuning  
Hold **Last/Next** 2 seconds to start the channel search in 100 KHz interval upwards or downwards. To stop tuning, push **Last/Next**.
5. Manual tuning  
Push **Last:** Downward 100 KHz  
Push **Next:** Upward 100 KH

## 6. Save current channel:

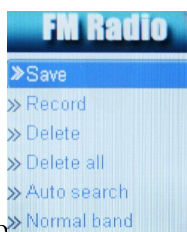

Push **Mode** to entry the submenu

Press **Mode** again to save channel.

## 7. Listening to a saved channel:

You can press **Play** to choose a saved channel.

## 8. Volume control

**VOL+**: Increase volume;

**VOL-**: Decrease volume



: 20 channels can be saved each in “General Frequency” and “Japan Frequency”

# Settings

### • Entry Settings

You can set system performances here, options may vary in different firmware version

1. Entry main menu

2. Push **Next** Scrolling into “Settings”

3. Press **Mode** to entry.

### • Options introduction:

|                      |                                                                               |
|----------------------|-------------------------------------------------------------------------------|
| • (Recording Time)   | Setting date and time when saving recorded file                               |
| • (Screensaver)      | Screensaver setting                                                           |
| • (Language)         | Choosing different languages                                                  |
| • (Timing shut off)  | Setting a count down time in minutes, the player will shut off when time out. |
| • (Repeat Setting)   | Setting repeat status                                                         |
| • (Contrast Setting) | Setting display's contrast                                                    |
| • (PC Mode)          | Options for 'Secret Space'                                                    |
| • (Memory Status)    | Check memory space and usage status                                           |
| • (Firmware Ver.)    | Version of player's firmware                                                  |
| • (Upgrade Firm.)    | Use for upgrade firmware                                                      |
| • (Exit)             | Exit from Setting interface                                                   |

### • List of menus:


○ 'Recording time' Setting

1. System setting interface



2. Press **Mode** to entry 'Recording time' interface


Recording time:

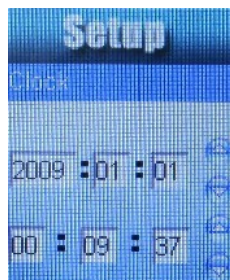

3. Push **VOL+** setting from years (**VOL-** from seconds). While setting, year on twinkling.
4. Push **Next** the value will increase (**Last** on opposite)
5. After setting, press **Mode** to exit.

○ "Screensaver" Setting

1. Press **Mode** entry screensaver setting;

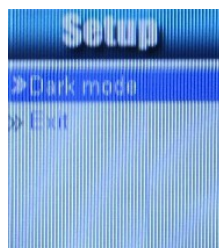

2. Push **Next** for choosing (**Last** for previous)
3. After setting, press **Mode** to exit.

○ Language Setting

This player has 24 display languages: Simplified Chinese, Trad Chinese, English, Japanese, Korean, French, Germany, Italian, Spanish, Portuguese, Dutch, Swedish, Czech, Danish, Polish, Thai and Russian. Poland, Turkey, Hebrew, Thai, Hungarian, Romanian, Arabic, Indonesian, Greek,

1. Press **Mode** to entry 'Language' interface



2. Push **Next** / **Last** to scrolling.
3. After setting, press **Mode** to exit.

---

### ○Turning off Setting

Please note:

You can set time in seconds on 'Battery saving' mode, allow the player shut down automatically when player become stop and idle for the period you have set. This function is void if the time set to 0.

You can set time in minutes on 'Sleep mode', allow the player shut down automatically when the player become idle (regardless current status) for the period you have set. It is designed for listening music before sleep. Please note: Sleep mode valid only once after setting, you have to set again if you want to use it next time.

### ○'Repeat Settings'

Please consult into 'Sound Setting'

Note: in "Manual Mode" you should set repeat point manually.

In "Automatic Mode" the player can identify sentence automatically when on A-B repeat. (This function is designed for repeat sentences in language studies.)

### ○'PC connection' Setting

Please consult into 'Sound Setting'

Some operation systems (Windows 2K SP4 or prior) may not recognize a USB disk with two symbols.

Therefore, you have to choose an active disk here when using 'Secret Space' function only the active disk can be found in PC.

### ○'Memory status'

You can check total memory space and the percentage of usage.

### ○'Firmware version'

You can find the player's firmware's version.

### ○'Firmware upgrade'

Use for upgrade player's firmware.



Tips: Press Play can exit current menu quickly. The function is valid on all other menus.

## Play Videos

1. Entry main menu, press **Next** scrolling to "MOVIE" (Only available to AMV files):



2. Press **MODE** to entry:




---

3 . Press **PLAY** to starting play



## • Reading Documents

- 1 .On main menu, press **Next/Last** choosing e-Document,
- 2 .Press **Mode** to entry corresponding submenu:

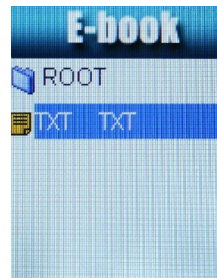

- 3 . Press **Next** or **Last** choosing the document you want to read, then press **Play** to read it.

Note: If you are set in 'Manual play' you must scroll text via Next or Last; texts can be scrolled automatically under 'Auto play' set.

## • Browsing Pictures

This function is available for JPG/GIF/BMP format.

1. On main menu, press **Next/Last** choosing Browsing pictures.
2. Press **Mode** to entry corresponding submenu:






3. Press **Next** or **Last** choosing the document you want to read, then press **Play** to play it..

## Other settings

### • Choose other fold (Stop submenu)




You can classify files into several different folders that ease to manage them (folders should be created on PC).  
The player can identify 9 folders in root
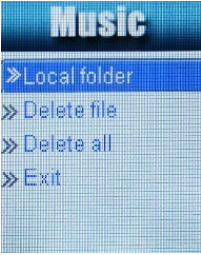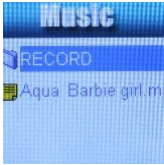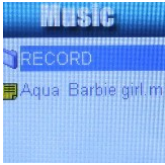
|                                                                                   |                                                                                    |
|-----------------------------------------------------------------------------------|------------------------------------------------------------------------------------|
| 1. When stopped                                                                   | 2. Press <b>Mode</b> to entry Stop submenu                                         |
|  |  |
| 3. Press <b>Mode</b> to entry folder choosing interface                           | 4. Press <b>Next</b> or <b>Last</b> to choose a folder                             |
|  |  |
| 5. Press <b>Mode</b> to entry selected folder.                                    |                                                                                    |

**Please note:** You can set folders independently in Music / Recorder / Play mode

- Delete file (Stop submenu)**

You delete correspond files/channels in each Music/Play/FM modes.◦
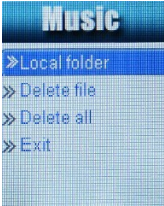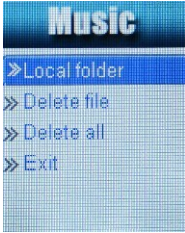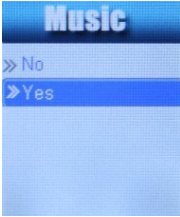
|                                                                                     |                                                                                      |
|-------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------|
| 1When Stopped. (No stop interface in FM mode)                                       | 2.Press <b>Mode</b> to entry Stop submenu                                            |
|  |   |
| 3. Press <b>Next</b> or <b>Last</b> to choose 'Delete file' or 'Delete all'         | 4. Press <b>Mode</b> to entry delete interface.                                      |
|  |  |
| 5.Press <b>Mode</b> to confirm delete                                               |                                                                                      |
|  |                                                                                      |

'Delete all' will delete all files in current folder of current mode. I.e. Choose 'Delete all' in Music mode will delete all music files; recorder files will not be affected.

On FM mode, all saved channel will be removed.



---

 Please safely removed player and unplug USB cable after delete files on PC, otherwise some files will not be removed.

- **Play mode (Play submenu)**

You can choose different play mode (i.e. repeat, shuffle) when playing music or recorded files.  
The first option on Play submenu is 'Play mode'

- **REPEAT**

|                                                                                                   |                                                         |
|---------------------------------------------------------------------------------------------------|---------------------------------------------------------|
|  (Normal)        | Playing music files in sequence until the end of folder |
|  (Repeat One)    | Repeat single music file                                |
|  (Folder)        | Play all music files in folder                          |
|  (Repeat Folder) | Repeat all music files in folder                        |
|  (Repeat All)    | Repeat all music files                                  |

- **SHUFFLE**

|                                                                                            |                                     |
|--------------------------------------------------------------------------------------------|-------------------------------------|
|  (Random) | Play music files in folder randomly |
|--------------------------------------------------------------------------------------------|-------------------------------------|

- **INTRO**

|                                                                                           |                                              |
|-------------------------------------------------------------------------------------------|----------------------------------------------|
|  (Intro) | Play the 10s of each music files in sequence |
|-------------------------------------------------------------------------------------------|----------------------------------------------|

- **Tempo rate(Play submenu)**

You can choose different play speed and not affect to sound. (Only valid to MP3 files)

1. While playing music
2. Push **Mode** to entry play submenu
3. Push **Next** scrolling to 'Play speed' option
4. Push **Mode** to entry
5. Push **Next** for faster, **Last** for slower

Note:

Play speed will applied to all music file

- **Repeat mode (Play submenu)**

Press **A-B** to entry or

Entry from Play submenu:

- **A-B Repeat**

1. When play music or recorder
2. Push **Mode** to entry play submenu
3. Push **Next** scrolling into 'Repeat Mode' option
4. Push **Mode** to entry
5. Push **Next** to select 'A'
6. Push Next to select B

Repeat Mode: 'A' of Symbol  flashes, waiting for starter A

'B' of symbol  flashes, waiting ender B

Symbol  fixed and starting repeat between A-B, while playing, you can push **Last** to reset A

point.

! In repeat mode, you can press **VOL+** or **VOL-** to adjust playing speed

○ **Karaoke Mode (No such Function in Playing mode)**

|                                                                                                                                     |                                                                                                                                 |
|-------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------|
| 1. A-B repeating<br>                               | 2. Push <b>Next</b> entry Karaoke mode<br>    |
| 3. Repeat symbol 'A-B', will be replaced to karaoke symbol 'A-B'. Player begins recording voice to the length of A-B repeat period. | 4. Upon time reaches, player resume play music file and the symbol replaced to 'A-B', push <b>Next</b> entry contrast function. |

! Press **Last** returns to Repeat A-B status.

○ **Contrast Function (No such Function in playing mode)**

- |                                                                                                        |                                                                                                         |
|--------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------|
| 1. While entry contrast function, repeat symbol displayed as "A-B", the original sound will be played. | 2. While finish original, repeat symbol will be replaced to "A-B", player will play the voice recorded. |
|--------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------|

! Push **Last** return to 'Karaoke mode'

! Press **Mode** to exit repeat mode upon above three modes.

- **Repeat times (Play submenu)**

Please consult into 'Backlight time setting'

Repeat time determines the times of play A-b repeat until exit

- **Repeat interval (Play submenu)**

Please consult into 'Backlight time setting'

Repeat interval determines the time period between previous repeat (in seconds).

- **New Function Recommends!**

! **About Secret Space**


Some MP3 user may worry about divulging secret. They do not want others to find private information contained, therefore these data have to be removed before lend their own MP3 to others. It makes some trouble.

However, this problem has totally solved by 'Secret Space' technique!


You can use provided software to divide the whole USB disk into two parts, and encrypt one of them. You can move your privacy into the encrypted part; they will be protected by password.

To active 'Secret Space':


1. Connect your player to PC
2. Run *MP3 Player Disk Tool* which can be found in provided CDROM

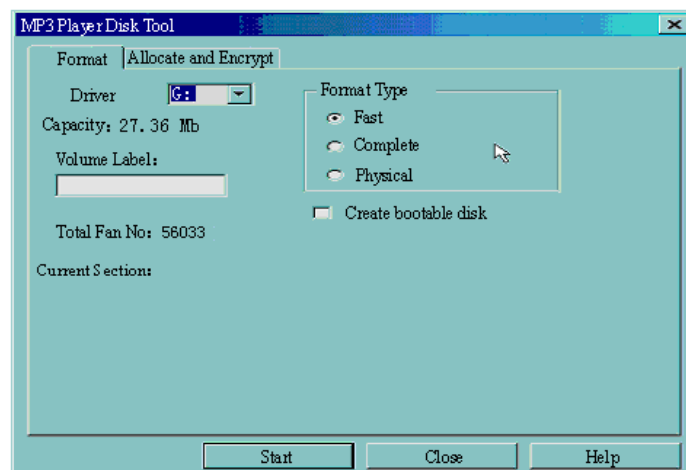

3. Click 'Allocation and Encrypt' card, Allocate appropriate space and set username and password, and then click Start.

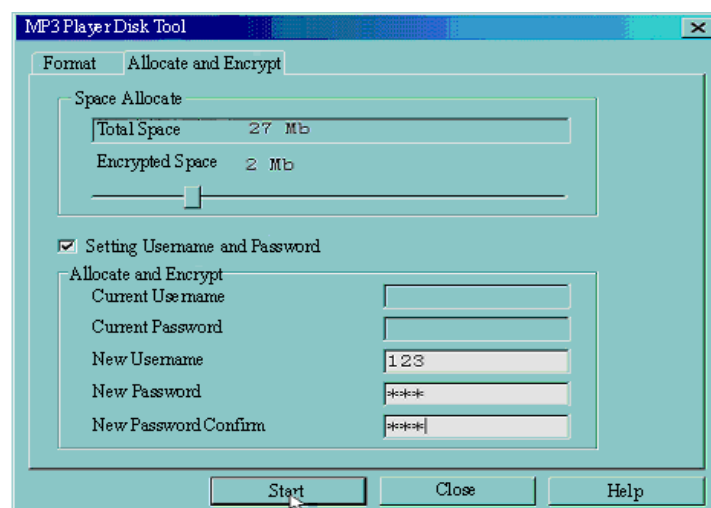


4. After space allocation, shown as below:

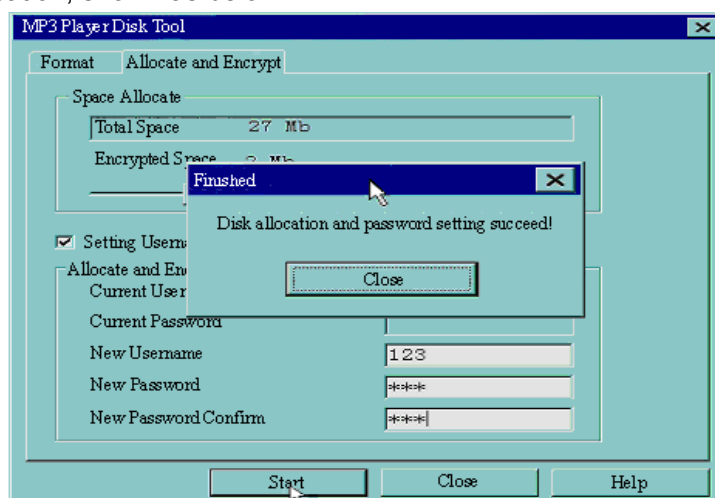


5. Click 'OK' to restart.
6. After restart you will find two disks (only one disk can be seen on Windows 2K SP4 or prior), click the

encrypted disk (the second one), you will find three files, two are hidden, one is executable

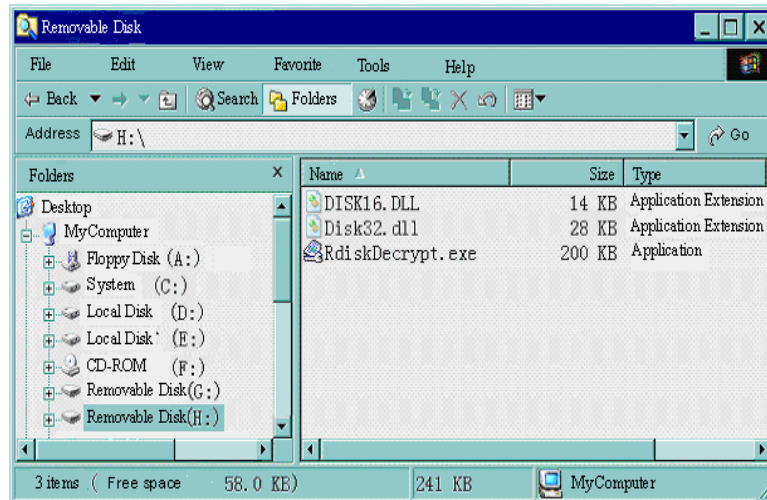

7. Running executable file 'RdiskDecrypt.exe' and input username and password. If all are correct, disk will be opened, and files can be copied into.

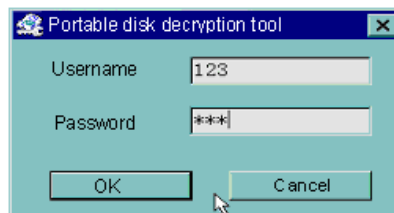

8. You must enter username and password each time access encrypted disk.



Warning: Divide one disk into parts will remove all data, and so does combine process.



Warning: Please remember username and password. If you forget it, you can only making combine processing and you will loss all encrypted data.

## ●Troubleshooting

|                               |                                                                                                                                                                                       |
|-------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| No Power                      | Check if battery had installed properly<br>Make sure you have switched the player on                                                                                                  |
| No Sound                      | Make sure volume is not on 0 position and the connection to earphone is valid<br>Please make sure the earphone is clean<br>Damaged MP3 files may have noise and even cannot be played |
| Strange characters on display | Make sure you have chose correct language                                                                                                                                             |
| FM has bad performance        | Adjust place of player and earphone<br>Switch off power appliance nearby<br>Earphone can be used as antenna                                                                           |
| Cannot Download Music         | Check USB cable, and make sure the player is properly connected to the PC<br>Check if the driver has well installed<br>Make there is still blank memory                               |

## Technical Specifications

|                  |                                                     |                            |
|------------------|-----------------------------------------------------|----------------------------|
| Dimension        |                                                     |                            |
| Weight           |                                                     |                            |
| Screen           | 1.5 CSTN (128*128)                                  |                            |
| Connecting to PC | High Speed USB1.1 (Read 1000K Byte, Write800K Byte) |                            |
| Memory           | 128M or above                                       |                            |
| Power Supply     | Max 6 hours play mode                               |                            |
| Voice Recorder   | Sample rate                                         | 8KHz                       |
|                  | Format                                              | WAV (32K bps),             |
|                  | Time                                                |                            |
| MP3、WMA、WMV、ASF  | Max. Output                                         | (L) 10mW + (R)10mW (32Ohm) |
|                  | MP3 Bit rate                                        | 8K bps – 320K bps          |
|                  | WMA、WMV、AS F Bit rate                               | 5K bps – 384K bps          |
|                  |                                                     |                            |

|                         |                                                                                                                                                                                                                                                         |                                |
|-------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------|
|                         | Freq. Response                                                                                                                                                                                                                                          | 20Hz to 20KHz                  |
|                         | SNR                                                                                                                                                                                                                                                     | 85dB                           |
|                         | Distortion                                                                                                                                                                                                                                              |                                |
| FM Radio                | Freq. Range                                                                                                                                                                                                                                             | 76MHz – 90MHz / 87MHz – 108MHz |
|                         | Max. Stored Channels                                                                                                                                                                                                                                    | 20 + 20                        |
|                         | Max. Output                                                                                                                                                                                                                                             | (L) 10mW + (R)10mW (32Ohm)     |
|                         | SNR                                                                                                                                                                                                                                                     | 45dB                           |
| Supported Music Formats | MP1, MP2, MP3, WMA, WAV                                                                                                                                                                                                                                 |                                |
| Operate Temperature     | 23 to 104 F degree                                                                                                                                                                                                                                      |                                |
| Languages Display       | Simplified Chinese, English, Traditional Chinese, Japanese, Korean, Russian, Hebrew, Thai, French, German, Italian, Dutch, Portuguese, Spanish, Swedish, Czech, Polish, Finnish, Danish, Hungarian, Slovakian, Croatian, Romanian, Turkish, Slovenian.. |                                |
| Supported Systems       | Windows98/SE/ME/2K/XP、Mac OS 10、Linux 2.4.2, Windows 7                                                                                                                                                                                                  |                                |

Please note: Design and characters may change without prior notice.